

video projector POWER  
\*to turn off: depress button  
until device lights flash

VCR ON/OFF

VCR controller  
buttons function as labeled

The image shows a black Extron remote control panel with a blue backlit display. The display is divided into two rows of three buttons each. The top row buttons are labeled 'PC' and 'TV'. The bottom row buttons are labeled 'VCR', 'TV', and 'TV'. To the left of the display are two controls: a 'DISPLAY POWER' button with a yellow indicator light and a 'VOLUME' knob with 'MAX' and 'MIN' markings. To the right of the display is a 'DVD & VCR CONTROL' section with a 'Tx' indicator light and several buttons: 'TITLE', 'MENU', 'ENTER', 'TV/VCR', 'PREV/REW', 'PLAY', 'NEXT/FWD', 'PAUSE', and 'STOP'. A red circle highlights the 'TV/VCR' button. A legend at the bottom identifies red squares as 'device selection buttons' and blue squares as 'TV channel selectors'. A text block at the bottom explains the panel's function.

volume

- device selection buttons  
Use these buttons, not lighted indicators, for device selection.
- TV channel selectors

This panel, referred to as the RC, is the controller for all presentation equipment in the room. The RC is used to select devices and manipulates some functions of those devices. Use the Quick Guide for proper operation.